
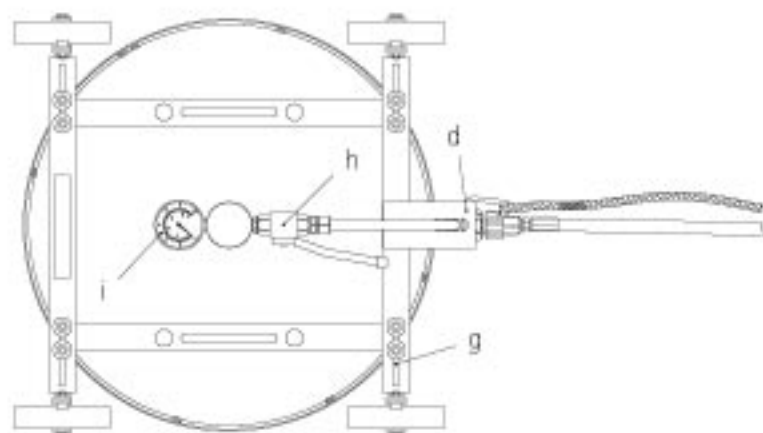


**Assembly instructions**

maximum retracted wheels

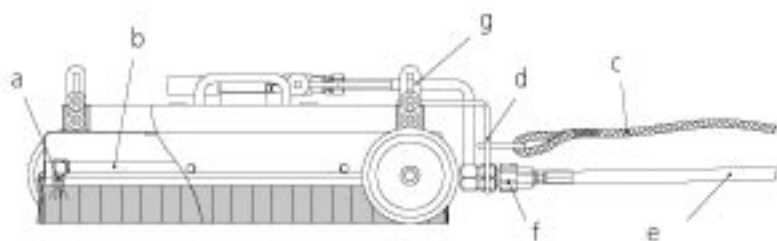

maximum extended wheels

1. Screw the nozzles (a / not included) into the rotor arm (b).
2. Connect the safety rope with snap hook (c / not included) into the safety eye (d).
3. Connect the HP hose (a) with the quick connect (f).
4. Adjust the wheel track (g) of the Roof Cleaner depending on the roof surface. Use the spacer (Included Accessory) to set the cleaning distance between spray nozzle and roof surface.
5. Turn on the operating pressure by using the ball valve (h). Please check the pressure on the roof again by using the pressure gage (i) mounted on the roof cleaner. Warning: Use correct pressure and nozzle angle according to roof surface.

**⚠** Operator must be secured according to roof working standards.

**⚠ For your own safety**

- Read all instructions before the initial operation. Check their proper condition and that they operate safely.
- Always use protection gear when using products connected to high pressure.
- Before any maintenance or nozzle-change, turn off the high pressure water supply; e.g.: turn off and secure the power switch.
- After turning off the system, allow all self propelled equipment to come to a complete stop before handling.
- Safety regulations and guidelines (Accident Prevention Rules) from the manufacturer of your high pressure cleaner are applicable.
- Nozzle installation according to nozzle manufacturer.
- Do not move the unit over objects or uneven surfaces.
- Do not lift up the unit while operating.
- Do not run the unit if spray-arm is out of balance or bent, damage to the swivel will result.
- No modifications to the unit are permitted.